



Original	Replacement
	Power
	Mute / Dimmer
	Shift + Up
	Shift + Down
	TV/Radio /
	AV / Input / RDS
	I<< / Preset-
	Stop / Hold
	>>I / Preset+
	<< / Tune-
	Play / Slow
	>> / Tune+
	Display / Media
	Pause / Step / Freeze
	Fav / Marker / PC
	Red / Netflix / Search
	Green / APP / Repeat

Original	Replacement
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Menu / Home
	Smart / List
	Up
	Left
	OK
	Right
	Shift + Back / Return
	Down
	Exit / Cancel / Clear
	Vol+
	Shift + Smart / List
	CH+ / Page+
	Vol-
	Guide / EPG / -/-
	CH- / Page-



