



 

 

















 





 







Original	Replacement
	 Power
	 AV / Input / RDS
	 Shift + Green / APP /
	 Picture / Format
	 Sound / Title
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--

Original	Replacement
	 Info / Angle
	 Smart / List
	 Mute / Dimmer
	 Menu / Home
	 Vol+
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Setup / OPT /
	 D.Menu / Top
	 Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK





Original	Replacement	Original	Replacement
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ
	Language		Audio / Lang I/II
	TXT		Text / Goto
	[]		Fav / Marker / PC
	Youtube		Shift + Yellow / YouTube / YouTube /
	Netflix		Shift + Red / Netflix /
	Rakuten tv		Shift + Blue / Prime Video / Random

