

 













 
 

 
 
 
 
 

 



 
 



 
 

 
 
 

 



 
 

 
 
 

 
 



 

 
 






 




 
 
Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Media
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 LCD Menu	 Menu
 9	 9	 DVB Menu	 D. Menu
 0	 0	 Input	 AV
 -/--	 Shift + Guide	 P.Mode	 Format
 Recall	 Back	 S.Mode	 Shift + Options
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 Info	 Info
 Nicam	 Smart	 FAV	 Pre Ch

Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Media
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 LCD Menu	 Menu
 9	 9	 DVB Menu	 D. Menu
 0	 0	 Input	 AV
 -/--	 Shift + Guide	 P.Mode	 Format
 Recall	 Back	 S.Mode	 Shift + Options
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 Info	 Info
 Nicam	 Smart	 FAV	 Pre Ch





Original	Replacement
 FAV+	 Shift + Ch +
 FAV-	 Shift + Ch -
 Text	 Text
 Hold	 Stop
 Lang	 Dual
 EPG	 Guide
 Index	 Options
 Size	 Eject
 Reveal	 3D
 Subpage	 Shift + Subt
 Red / Tv/Radio	 Red
 Red / Tv/Radio	 TV/R
 Green / Audio	 Green
 Green / Audio	 Shift + Dual
 Yellow / Freeze	 Yellow
 Yellow / Freeze	 Pause
 Blue / Subtitle	 Blue

Original	Replacement
 Blue / Subtitle	 Subt

