



 

 

 



 




















 





 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Pause / Step / Freeze
 Rec/Auto	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 CH+ / Page+	 CH+ / Page+	 DTV	 Smart / List
 Subtitle	 Subtitle / EQ	 EPG	 Guide / EPG / -/-
 Vol+	 Vol+	 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-		
 T.Shift	 Setup / OPT /		
 Vol-	 Vol-		
 Play/Pause/Hold	 Play / Slow		
 Play/Pause/Hold	 +  Shift + Stop /		
 <</Reveal	 << / Tune-		
 >>/Size	 Zoom / Size		
 >>/Size	 >> / Tune+		
 Stop/Index	 Stop / Hold		
 I<<	 I<< / Preset-		
 S.Page/>>I	 >>I / Preset+		
 Text	 Text / Goto		
 FAV	 Fav / Marker / PC		
 Audio	 Audio / Lang I/II		

