



 




Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Info	Info / Angle
Epg	Guide / EPG / -/-
Menu	Menu / Home
CH+	CH+ / Page+
Up	Up

Original	Replacement
Exit	Exit / Cancel / Clear
Left	Left
Vol-	Vol-
Ok	OK
Right	Right
Vol+	Vol+
Media	Display / Media
CH-	CH- / Page-
Down	Down
TV/Radio	TV/Radio /
Sleep/Red	Sleep / Timer
Subtitle/Green	Subtitle / EQ
Teletext/Yellow	Text / Goto
Audio/Blue	Audio / Lang I/II
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze





	Original	Replacement	Original	Replacement
	>>	 >> / Tune+		
	Prev	 I<< / Preset-		
	Rec	 Rec / Rec Mode		
	FAV	 Fav / Marker / PC		
	Stop	 Stop / Hold		

