



Original	Replacement
 Standby	 Power
 A-B	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Open / Close	 Eject / Surround
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Language	 Audio / Lang / I
 OSD	 Display / Media
 L/R	 CH+ / Page+
 P/N	 CH- / Page-
 Clear	 Exit / Cancel / Clear
 Program	 TV/Radio /
 Setup	 Setup / OPT /
 Up	 Up
 Enter	 OK
 Left	 Left
 Play	 Play / Slow

Original	Replacement
 Right	 Right
 PBC	 D.Menu / Top
 Down	 Down
 Title	 Sound / Title
 Prev	 I<< / Preset-
 Rev	 << / Tune-
 Fwd	 >> / Tune+
 Next	 >>I / Preset+
 Slow	 Shift + Play /
 Step	 Shift + Pause / Step /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 Zoom	 Zoom / Size
 4	 4





Original	Replacement	Original	Replacement
5	5	TAPE 5	5
6	6	TUNER 6	6
10+	10+	GUIDE EPG	Guide / EPG / -/--
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
Go To	Go To	GOTO TEXT	Text / Goto
Resume	Resume	LIST SMART	Smart / List
Digest	Digest	RDS AV INPUT	AV / Input / RDS
Vol+	Vol+	+ VOL	Vol+
Mute	Mute	DIMMER MUTE	Mute / Dimmer
Mode	Mode	HOME MENU	Menu / Home
Return	Return	RETURN BACK	Back / Return
Vol-	Vol-	- VOL	Vol-

