





 





 



 








Original	Replacement
	Power
	Tv/Radio
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide
	Back
	Menu
	Pre Ch

Original	Replacement
	Info
	Exit
	Up
	Down
	Right
	Left
	Ok
	Ch +
	Ch -
	Vol +
	Vol -
	Red
	Green
	Yellow
	Blue
	Subt
	Dual



