



























 

 











































 









 

 




 
 


Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Display	 Display / Media
 Picture	 Picture / Format	 Up	 Up
 Aspect	 Shift + Picture / Format	 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer	 Left	 Left
 Sound	 Sound / Title	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Menu	 Menu / Home
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Vol +	 Vol+
 6	 6	 TV / Radio	 TV/Radio /
 7	 7	 EPG	 Guide / EPG / -/-
 8	 8	 CH +	 CH+ / Page+
 9	 9	 Vol -	 Vol-
 FAV	 Fav / Marker / PC	 Eject	 Eject / Surround
 0	 0	 CH -	 CH- / Page-





Original	Replacement
 Subtitle	 Subtitle / EQ
 CH List	 Smart / List
 Rec	 Rec / Rec Mode
 Rec List	 Shift + Smart / List
 TV/TXT / D.Pro	 Shift + TV/Radio / Program
 TV/TXT / D.Pro	 Text / Goto
 Cancel / D.Rep	 Shift + Exit / Cancel / Clear
 Cancel / D.Rep	 Shift + Green / APP /
 Reveal / D.Goto	 Shift + Text /
 Nicam/A2 /	 Shift + Play /
 Nicam/A2 /	 Shift + Audio / Lang I/II
 Index / I<<<	 I<<< / Preset-
 Hold / >>>I	 >>>I / Preset+
 Hold / >>>I	 Shift + Stop /
 Size / D.Zoom	 Zoom / Size
 Subpage / D.Title	 Shift + Sound / Title
 <<<	 <<< / Tune-

Original	Replacement
 >>>	 >>> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Red / D.Set	 Shift + OK
 Red / D.Set	 Red / Netflix / Search
 Green / D.Menu	 D.Menu / Top
 Green / D.Menu	 Green / APP / Repeat
 Yellow / D.Sub.	 Yellow / YouTube / Repeat
 Yellow / D.Sub.	 Shift + Subtitle / EQ
 Blue / D.Lan	 Blue / Prime Video / Random
 Blue / D.Lan	 Audio / Lang I/II

