 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 


 


 
 








 
 
 
 
 
 
 

 
 
 
 


 
 
 
 
 


 

 

 
 







Original	Replacement
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 FAV PRE-CH Pre Ch
 Vol+	 + VOL Vol +
 Vol-	 - VOL Vol -

Original	Replacement
 Aspect	 PICTURE FORMAT Format
 Audio	 SOUND DUAL Dual
 CH+ CH	 + CH Ch +
 CH- CH	 - CH Ch -
 Display	 DISPLAY INFO Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK Ok
 LCD Menu	 TOP MENU MENU Menu
 DVD SETUP EXIT	 CLEAR EXIT Exit
 DVD SETUP EXIT	 SETTINGS OPT Options
 INPUT	 TIMER AV AV
 P.Mode	 SHIFT + PICTURE FORMAT Shift + Format
 S.Mode	 SHIFT + SOUND DUAL Shift + Dual
 Sleep	 PROG SLEEP Sleep





Original	Replacement
	 Shift + Pre Ch
	 Shift + Ch -
	 Shift + Ch +
	 Guide
	 Text
	 Shift + Eject
	 TV/R
	 3D
	 List
	 Subt
	 Smart
	 D. Menu
	 Media
	 Play
	
	 Pause
	

Original	Replacement
	 Rec
	 Stop
	 I<<
	 >>I
	 Red
	 Green
	 Yellow
	 Blue

