 








Original		Replacement		Original		Replacement	
	Power		Power		Green / Sub		Subt
	Mute		Mute		Yellow		Yellow
	1		1		Blue		Blue
	2		2		Vol-		Vol -
	3		3		Vol+		Vol +
	4		4		Info		Info
	5		5		Exit		Exit
	6		6		EPG		Guide
	7		7		Smart		Smart
	8		8		File		Media
	9		9		Menu		Menu
	0		0		Up		Up
	TV / Radio		TV/R		Left		Left
	Last		Back		OK		Ok
	Red / Audio		Red		Right		Right
	Red / Audio		Dual		Down		Down
	Green / Sub		Green		TTX		Text





Original	Replacement
 OPT	 Options
 <<<	 <<<
 >>>	 >>>
 Play	 Play
 Stop	 Stop
 Rec	 Rec
 Pause	 Pause
 F1	 +  Shift + 1
 F2	 +  Shift + 2

Original	Replacement

