 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 
 

 


 

 
 




 

 
 
 
 
 
 

 
 





Original	Replacement
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Aspect	 Format
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 LCD Menu	 Menu
 DVD Setup/Exit	 Exit
 DVD Setup/Exit	 Options
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep





Original	Replacement
	FAV
	FAV-
	FAV+
	EPG
	TEXT
	HOLD
	TV/RADIO
	SUBPAGE
	REVEAL
	SUBTITLE
	SIZE
	INDEX
	MEDIA
	PLAY/PAUSE
	REWIND
	STOP
	PLAY/PAUSE
	FAST FORWARD

Original	Replacement
	Rec
	Stop
	I<<
	>>I
	Red
	Green
	Yellow
	Blue

