



| Original  | Replacement   | Original   | Replacement   |
|---|---|--|---|
|  Power       |  Power                           |  Info       |  Info / Angle          |
|  Mute        |  Mute / Dimmer                   |  [ I ]/Menu |  Menu / Home           |
|  Red         |  Red / Netflix / Search          |  Up         |  Up                    |
|  Green       |  Green / APP / Repeat            |  Source     |  AV / Input / RDS      |
|  Yellow      |  Yellow / YouTube / Repeat       |  Left       |  Left                  |
|  Blue        |  Blue / Prime Video / Random     |  OK         |  OK                    |
|  << / [≡o]   |  << / Tune-                      |  Right      |  Right                 |
|  >> / [≡?]   |  >> / Tune+                      |  Down       |  Down                  |
|   << / [≡+]  |   << / Preset-                   |  EPG        |  Guide / EPG / -/-     |
|  >>  / [≡..] |  >>  / Preset+                   |  Exit       |  Exit / Cancel / Clear |
|  Play       |  Play / Slow                    |  Vol+      |  Vol+                 |
|  Pause     |  Pause / Step / Freeze         |  FAV      |  Fav / Marker / PC   |
|  Stop      |  Stop / Hold                   |  CH+      |  CH+ / Page+         |
|  [≡i]      |  Smart / List                  |  Vol-     |  Vol-                |
|  Text      |  Text / Goto                   |  REP/Rec  |  Rec / Rec Mode      |
|  Subtitle  |  Subtitle / EQ                 |  CH-      |  CH- / Page-         |
|  Freeze    |  Shift + Pause / Step / Freeze |  1        |  1                   |





| Original | Replacement                       |
|----------|-----------------------------------|
| 2        | DVD 2                             |
| 3        | CD - STB 3                        |
| 4        | VIDEO 4                           |
| 5        | TAPE 5                            |
| 6        | TUNER 6                           |
| 7        | AUX - HDD 7                       |
| 8        | USB 8                             |
| 9        | BLUETOOTH 9                       |
| AUDIO    | LANG I/II AUDIO Audio / Lang I/II |
| 0        | HDMI - BAT 0                      |
| RECALL   | RETURN BACK Back / Return         |

| Original | Replacement |
|----------|-------------|
|----------|-------------|



















 








| Original  | Replacement   | Original | Replacement |
|-----------|---|----------|-------------|
| Power     |  Power                 |          |             |
| Mute      |  Mute / Dimmer         |          |             |
| Play      |  Play / Slow           |          |             |
| Pause     |  Pause / Step / Freeze |          |             |
| Stop      |  Stop / Hold           |          |             |
| Rec       |  Rec / Rec Mode        |          |             |
| <</Hold   |  << / Tune-            |          |             |
| >>/Index  |  >> / Tune+            |          |             |
| I<<       |  I<< / Preset-         |          |             |
| >>I       |  >>I / Preset+         |          |             |
| Nicam/A2  |  Audio / Lang I/II     |          |             |
| Subtitle  |  Subtitle / EQ       |          |             |
| Subpage   |  Eject / Surround    |          |             |
| Size      |  Zoom / Size         |          |             |
| Sleep     |  Sleep / Timer       |          |             |
| DTV/Radio |  TV/Radio /          |          |             |
| Reveal    |  D.Menu / Top        |          |             |

| Original | Replacement   | Original | Replacement |
|----------|---|----------|-------------|
| TXT/MIX  |  Text / Goto           |          |             |
| Menu     |  Menu / Home           |          |             |
| Up       |  Up                    |          |             |
| Info     |  Info / Angle          |          |             |
| Left     |  Left                  |          |             |
| Enter    |  OK                    |          |             |
| Right    |  Right                 |          |             |
| Cancel   |  Exit / Cancel / Clear |          |             |
| Down     |  Down                  |          |             |
| Back     |  Back / Return         |          |             |
| Vol+     |  Vol+                  |          |             |
| List     |  Smart / List        |          |             |
| CH+      |  CH+ / Page+         |          |             |
| Vol-     |  Vol-                |          |             |
| Mode     |  Display / Media     |          |             |
| CH-      |  CH- / Page-         |          |             |
| 1        |  1                   |          |             |





| Original | Replacement  | Original | Replacement |
|----------|--|----------|-------------|
| 2        |  2  |          |             |
| 3        |  3  |          |             |
| 4        |  4  |          |             |
| 5        |  5  |          |             |
| 6        |  6  |          |             |
| 7        |  7  |          |             |
| 8        |  8  |          |             |
| 9        |  9  |          |             |
| EPG      |  Guide / EPG / -/--   |          |             |
| 0        |  0  |          |             |
| FAV      |  Fav / Marker / PC   |          |             |
| Red      |  Red / Netflix / Search   |          |             |
| Green    |  Green / APP / Repeat   |          |             |
| Yellow   |  Yellow / YouTube / Repeat  |          |             |
| Blue     |  Blue / Prime Video / Random  |          |             |
| <</Hold  |  +  Shift + Stop / |          |             |
| FAV-     |  +  Shift + Left   |          |             |

| Original | Replacement  | Original | Replacement |
|----------|--|----------|-------------|
| FAV+     |  +  Shift + Right              |          |             |
| -/--     |  +  Shift + Guide / EPG / -/-- |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |
|          |  |          |             |





| Original   | Replacement   | Original | Replacement   |
|------------|---|----------|---|
| Power      |  Power                 | Up       |  Up                    |
| Mute       |  Mute / Dimmer         | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |

| Original   | Replacement   | Original | Replacement   |
|------------|---|----------|---|
| Power      |  Power               | Up       |  Up                    |
| Mute       |  Mute / Dimmer       | Info     |  Info / Angle          |
| Play       |  Play / Slow           | Left     |  Left                  |
| Pause      |  Pause / Step / Freeze | Ok       |  OK                    |
| Stop       |  Stop / Hold           | Right    |  Right                 |
| Rec        |  Rec / Rec Mode        | Exit     |  Exit / Cancel / Clear |
| <</[Timer] |  << / Tune-            | Down     |  Down                  |
| >>/[≡?]    |  >> / Tune+            | Recall   |  Back / Return         |
| I<</[≡⇅]   |  I<< / Preset-         | Vol+     |  Vol+                  |
| >>I/[≡...] |  >>I / Preset+         | [≡i]     |  Smart / List          |
| Audio      |  Audio / Lang I/II    | Ch+      |  CH+ / Page+          |
| Subtitle   |  Subtitle / EQ       | Vol-     |  Vol-                |
| I<</[≡⇅]   |  Zoom / Size         | Ch-      |  CH- / Page-         |
| <</[Timer] |  Sleep / Timer       | 1        |  1                   |
| Text       |  Text / Goto         | 2        |  2                   |
| Source/Av  |  AV / Input / RDS    | 3        |  3                   |
| [II]       |  Menu / Home         | 4        |  4                   |





| Original | Replacement   | Original | Replacement |
|----------|---|----------|-------------|
| 5        |  5                             |          |             |
| 6        |  6                             |          |             |
| 7        |  7                             |          |             |
| 8        |  8                             |          |             |
| 9        |  9                             |          |             |
| Epg      |  Guide / EPG / -/--            |          |             |
| 0        |  0                             |          |             |
| Fav      |  Fav / Marker / PC             |          |             |
| Red      |  Red / Netflix / Search        |          |             |
| Green    |  Green / APP / Repeat          |          |             |
| Yellow   |  Yellow / YouTube / Repeat   |          |             |
| Blue     |  Blue / Prime Video / Random |          |             |
| Freeze   |  Shift + Pause / Step /      |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |

