 



 

 
 
 







 

 



 

 

















 


 
 









 







Original	Replacement
	 Power
	 Shift + 3
	 Shift + 1
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Display / Media
	 0
	 AV / Input / RDS
	 Vol+

Original	Replacement
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Info / Angle
	 Setup / OPT /
	 Smart / List
	 Guide / EPG / -/-
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Shift + Down





Original	Replacement	Original	Replacement
 Zoom+	 Shift + Up	 >	 >> / Preset+
 @/Home	 D.Menu / Top	 <<	 << / Tune-
 Sleep	 Sleep / Timer	 Rec	 Rec / Rec Mode
 Pre-CH	 Shift + Back / Return	 >>	 >> / Tune+
 FAV	 Fav / Marker / PC		
 List	 Shift + Smart / List		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 OO/Lang	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Text	 Text / Goto		
 <	 << / Preset-		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		

