

 





 


 
 

 
 
 
 

 


 


 












 
 



 
 




 
 
 




 
 

 



 


 
 

 



 

 

 
 
 

 
 

 


 


 






 

 




 
Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 Ch -
 Input	 AV	 Mute	 Mute
 1	 1	 In Stop	 D. Menu
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right/time Shift	 Right
 6	 6	 Left/Time Shift	 Left
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 In Start	 Eject
 0	 0	 ADJ	 Options
 TV	 TV/R	 XStudio	 Dual
 RGB	 List	 Text	 Text
 Vol+	 Vol +	 Check-P	 Shift + Left
 Vol-	 Vol -	 Check-S	 Shift + Right
 CH+	 Ch +	 PSM	 Pre Ch

Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 Ch -
 Input	 AV	 Mute	 Mute
 1	 1	 In Stop	 D. Menu
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right/time Shift	 Right
 6	 6	 Left/Time Shift	 Left
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 In Start	 Eject
 0	 0	 ADJ	 Options
 TV	 TV/R	 XStudio	 Dual
 RGB	 List	 Text	 Text
 Vol+	 Vol +	 Check-P	 Shift + Left
 Vol-	 Vol -	 Check-S	 Shift + Right
 CH+	 Ch +	 PSM	 Pre Ch





Original	Replacement
 PIP	 3D
 CAP	 Info
 MPX	 Sleep
 SSM	 Subt
 ARC	 Format
 Red/Info	 Red
 Green/Still	 Green
 Yellow/HDMI-HO	 Yellow
 Blue/USB-HOT	 Blue
 Eye	 Back
 B-Tooth	 Smart
 Simplink / PIP PR-	 Shift + Ch -
 PIP PR +	 Shift + Ch +
 Tilt/PIP Input	 Shift + AV
 Play	 Play
 Pause/Swap	 Pause
 >>I	 >>I

Original	Replacement
 I<<	 I<<
 P-Only	 Guide
 AV1	 Shift + 1
 AV2	 Shift + 2
 AV3	 Shift + 3
 COMP1	 Shift + 4
 COMP2	 Shift + 5
 HDMI1	 Shift + 6
 HDMI2	 Shift + 7
 HDMI3	 Shift + 8
 HDMI4/DVI	 Shift + 9

