

 
 






 
 
 


 

 





 

 


 
 
 
 




 





Original	Replacement
 Power Tv	 Power
 Tv/Video	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10/Tv Return	 Guide
 +10/100+	 Pre Ch
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 Muting	 Mute





Original	Replacement	Original	Replacement
Power Audio	Power	Down	Down
1	1	Right/Preset Up	Right
2	2	Left/Preset Down	Left
3	3	Muting	Mute
4	4	Menu/PL	Menu
5	5	Top Menu/PG	+ Shift + Menu
6	6	On Screen	3D
7	7	Back / Rec	Rec
8	8	Stop / Memory	Stop
9	9	Play	Play
0	0	Pause/FM Mode	Pause
10 / Tv Return	Guide	I<</Tuning-	I<<
+10 / 100+	Pre Ch	>>I/Tuning+	>>I
CH+	Ch +	<</Slow-	<<
CH-	Ch -	>>/Slow+	>>
Up	Up	Audio	Dual
Enter	Ok	Angle	+ Shift + 3D



 

 

 
 












 
 

 




 



 



Original	Replacement
 Zoom	 Eject
 Subtitle	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 Repeat	 Text
 Page	 List
 Surround	 Smart
 PTY Search	 AV
 TA/News/Info	 Info
 PTY Select-	 Shift + Left
 PTY Select+	 Shift + Right
 Level+	 Shift + Up
 Level-	 Shift + Down
 Sleep	 Sleep
 Return	 Back
 Display	 Shift + Info
 Play Mode	 Format

Original	Replacement
 STB Control	 Shift + Smart
 Dimmer	 Shift + Media
 USB Memory	 Media
 Cancel	 Exit
 DVD	 Blue
 iPod	 Red
 FM/AM	 Green
 VCR/Video Control	 Yellow
 Tv/Video	 TV/R
 Set Up	 D. Menu
 SPK Level	 Shift + AV
 Setting	 Options
 Treble/Bass	 Shift + Sleep
 Title/Group	 Shift + List
 VFP/Scan Mode	 Shift + Options
 Tv Sound	 Shift + Dual





	Original	Replacement	Original	Replacement
	Power VCR/STB		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	Tv/Video		TV/R	
	CH+		Ch +	
	CH-		Ch -	
	Vol+		Vol +	
	Vol-		Vol -	
	Muting		Mute	

