 


 










 



 
 

 
 

 
 



 



 



 
 




 
 






Original	Replacement
 View DVD	 Smart
 View VCR	 Media
 TV / VCR	 TV/R
 Input SEL.	 AV
 Standby / On	 Power
 Open / Close	 Eject
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Timer	 Shift + AV
 F.ADV / Step	 Pre Ch
 I<<	 I<<
 Rec	 Rec
 Speed	 Sleep
 >>I	 >>I
 <<	 <<
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >>	 >>
 TRK +	 Vol +
 TRK -	 Vol -
 Audio	 Dual
 Prog +	 Ch +
 Prog -	 Ch -
 Menu	 Menu





Original		Replacement		Original		Replacement	
	Return		Back				
	Up		Up				
	Right		Right				
	Down		Down				
	Left		Left				
	OK		Ok				
	Disc Menu		D. Menu				
	Clear		Exit				
	Zoom		Shift + Eject				
	EZ View		Options				
	Subtitle		Subt				
	Angle / IPC		Format				
	Mode / Repeat		Text				
	Mark / Search		Shift + TV/R				

