
 
 



 

 



 







 











 






 

 


 




 






Original	Replacement
 Power	 Power
 ><>	 Shift + Menu
 Source	 AV
 I - II	 Dual
 Subtitles	 Subt
 [ i + ]	 Info
 [ ? ]	 D. Menu
 Mix	 TV/R
 Zoom	 Eject
 Time	 Shift + AV
 [ PP ]	 Back
 DNR	 Options
 Mosaic	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Replacement
 Red / Menu	 Red
 Red / Menu	 Shift + Format
 Green / Menu	 Green
 Green / Menu	 Shift + Dual
 Yellow / Other	 Yellow
 Yellow / Other	 Menu
 Blue / OK	 Blue
 Blue / OK	 Ok
 Special Audio	 Shift + Subt
 Text	 Text
 P -	 Ch -
 P +	 Ch +
 Vol -	 Vol -
 Vol +	 Vol +
 1	 1
 2	 2
 3	 3








 











 





 



















 



 











 



 




	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	Time		TV/R		Play		Play
	Zoom		3D		Timer		Shift + AV
	Mix		Text		P-		Ch -
	[?]		Shift + Info		P +		Ch +
	[i+]		Info		1		1
	Freeze/Rec		Pause		2		2
	Format/Stop		Format		3		3
	Source		AV		4		4
	I-II		Dual		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	Rec		Rec		0		0
	<<		<<		-/-		Guide
	>>		>>	