









 








Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Replacement	Replacement
CH / Guide		Guide / EPG / -/-
Up		Up
M		Menu / Home
A / CH		Info / Angle
Down		Down
Vol+		Vol+
Vol-		Vol-
Left / -		Left
Right / +		Right
Mute		Mute / Dimmer
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
G	 + 	Shift + Yellow / YouTube / Repeat







































Original	Replacement	Original	Replacement
Clock	 +  Shift + Sleep / Timer		
E	 +  Shift + Red / Netflix		
F	 +  Shift + Green / APP		
A / V	 AV / Input / RDS		





Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Replacement	Replacement
Up		Up
CH / Guide		Guide / EPG / -/--
Down		Down
M		Menu / Home
Vol+		Vol+
A / CH		Info / Angle
Vol-		Vol-
Mute		Mute / Dimmer
Left / -		Left
Right / +		Right
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
Clock		Shift + Sleep / Timer

































 

 
 


Original	Replacement	Original	Replacement
E	 +  Shift + Red / Netflix /		
F	 +  Shift + Green / APP /		
G	 +  Shift + Yellow / YouTube /		
A / V	 AV / Input / RDS		





Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Replacement	Replacement
CH / Guide		Guide / EPG / -/--
Up		Up
Down		Down
A / CH		Info / Angle
M		Menu / Home
Right / +		Right
Left / -		Left
Vol+		Vol+
Vol-		Vol-
Mute		Mute / Dimmer
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
E		Shift + Red / Netflix / Search





Original	Replacement	
F	SHIFT + APP REPEAT	Shift + Green / APP /
G	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
Clock	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
A / V	RDS AV INPUT	AV / Input / RDS

Original	Replacement

