



 

 

 



 





 











 

 



 





 











 




 





Original	Replacement
 Power	 Power
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 *	 D.Menu / Top
 Cable	 AV / Input / RDS
 1	 1
 Live Zoom	 Zoom / Size
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 Search	 Display / Media

Original	Replacement
 Guide	 Guide / EPG / -/-
 0/Quick Access	 0
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Home	 Menu / Home
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Up	 Up
 Netflix	 Shift + Red / Netflix /
 Down	 Down
 Amazon	 Shift + Blue / Prime
 Right	 Right





Original	Replacement
 T.Opt/Magic Link	 Setup / OPT /
 Left	 Left
 OK	 OK
 AD	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Stop/Line Tv	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

