 



 



 
 


 
 


 
 
 
 




 
 








 
 




 

 
 
 

 



 



 



 
 
 

 



 





Original	Replacement	Original	Replacement
 Power	 Power	 Scan >>	 >>
 Open/Close	 Eject	 I<< Skip	 I<<
 Subtitle	 Subt	 Skip >>I	 >>I
 Info/Menu	 Menu	 Enter	 Ok
 Disc Menu	 D. Menu	 Up/Presets+	 Up
 Home	 Smart	 Down/Presets-	 Down
 Back	 Back	 Left/Tuning-	 Left
 Sleep	 Sleep	 Right/Tuning+	 Right
 Function	 AV	 Red	 Red
 Title/PopUp	 Info	 Green	 Green
 Vol+	 Vol +	 Yellow	 Yellow
 Vol-	 Vol -	 Blue/Mono/Stereo	 Blue
 Mute	 Mute	 1	 1
 Play	 Play	 2	 2
 Pause/Step	 Pause	 3	 3
 Stop	 Stop	 4	 4
 << Scan	 <<	 5	 5





Original	Replacement
6	6
7	7
8	8
9	9
0	0
Rec	Rec
Audio	Dual
MIC/ECHO	Options
Repeat	Text
Clear	Exit
*	Guide
Optical/Tv Sound	TV/R
Sound Effect	3D
Speaker Level	Format
Power Tv	Shift + Power
AV/Input Tv	Shift + AV
PR/CH+ Tv	Ch +

Original	Replacement
PR/CH- Tv	Ch -
Vol+ Tv	Shift + Vol +
Vol- Tv	Shift + Vol -
Mute Tv	Shift + Mute

