



Original	Replacement	Original	Replacement
	Power		Power
	Energy Saving		Sleep / Timer
	AV Mode		Picture / Format
	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.Vlew		Setup / OPT /
	Vol+		Vol+
	Fav/Mark/Char/Nu		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	Mute/Delete		Mute / Dimmer
	P-		CH- / Page-
	Menu		Menu / Home
	NetCast		Sound / Title
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Back		Back / Return





	Original	Replacement	Original	Replacement
	Guide	Guide / EPG / -/--		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue/L/R/Select	Blue / Prime Video / Random		
	Text	Text / Goto		
	T.Opt	Shift + Setup / OPT / Tools		
	Subtitle	Subtitle / EQ		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Simplink	Display / Media		
	Info	Info / Angle		
	AD	Audio / Lang I/II		
	APP/*	Shift + Green / APP / Repeat		

