 









 



 

 

 

 

 

 

 








 
 




 
 






| Original   | Replacement  |
|--|--|
|  Tv               |  TV/Radio /         |
|  Power            |  Power              |
|  World            |  Smart / List       |
|  [=]/Text         |  Text / Goto        |
|  Sleep            |  Sleep / Timer      |
|  Music/Movie/Phot |  Sound / Title      |
|  1                |  1                  |
|  2                |  2                  |
|  3                |  3                  |
|  4               |  4                 |
|  5              |  5                |
|  6              |  6                |
|  7              |  7                |
|  8              |  8                |
|  9              |  9                |
|  Source/Games   |  AV / Input / RDS |
|  0              |  0                |

| Original   | Replacement   |
|--|---|
|  Recall   |  Shift + Back / Return       |
|  Red      |  Red / Netflix / Search      |
|  Green    |  Green / APP / Repeat        |
|  Yellow   |  Yellow / YouTube / Repeat   |
|  Blue     |  Blue / Prime Video / Random |
|  Vol+     |  Vol+                        |
|  Mute     |  Mute / Dimmer               |
|  PR+      |  CH+ / Page+                 |
|  Vol-     |  Vol-                        |
|  i       |  Info / Angle               |
|  PR-    |  CH- / Page-               |
|  Menu   |  Menu / Home               |
|  Up     |  Up                        |
|  Q.Menu |  D.Menu / Top              |
|  Left   |  Left                      |
|  OK     |  OK                        |
|  Right  |  Right                     |





| Original  | Replacement | Original  | Replacement           |
|---|-------------|---|-----------------------|
|    | Back        |    | Back / Return         |
|    | Down        |    | Down                  |
|    | Exit        |    | Exit / Cancel / Clear |
|    | [≡]..       |    | Setup / OPT /         |
|    | Lang        |    | Audio / Lang I/II     |
|    | O/*         |    | Zoom / Size           |
|    | Q./*        |    | Picture / Format      |
|    | Play        |    | Play / Slow           |
|    | Stop        |    | Stop / Hold           |
|    | <<          |    | << / Tune-            |
|   | >>          |   | >> / Tune+            |
|  | Pause       |  | Pause / Step / Freeze |
|  | Rec         |  | Rec / Rec Mode        |
|  | Guide       |  | Guide / EPG / -/--    |
|  | [-O-]       |  | Display / Media       |
|   |             |   |                       |
|   |             |   |                       |

