



Original	Replacement	Original	Replacement
Power	Power	0	0
TV / Radio	TV/Radio /	Recall	Back / Return
P.Mode	Picture / Format	Vol+	Vol+
S.Mode	Sound / Title	Mute	Mute / Dimmer
Sleep	Sleep / Timer	CH +	CH+ / Page+
Aspect	Shift + Picture / Format	Vol -	Vol-
1	1	Source	AV / Input / RDS
2	2	CH -	CH- / Page-
3	3	Nicam / Angle	Info / Angle
4	4	Nicam / Angle	Shift + Audio / Lang I/II
5	5	Menu	Menu / Home
6	6	Subtitle	Subtitle / EQ
7	7	i / Display	Display / Media
8	8	Exit	Exit / Cancel / Clear
9	9	Return	Shift + Back / Return
CH List / 10+	Shift + Guide / EPG / -/-	Up	Up
CH List / 10+	Smart / List	Left	Left





Original	Replacement
 OK	 OK
 Right	 Right
 Record / Eject	 Rec / Rec Mode
 Record / Eject	 Eject / Surround
 Down	 Down
 EPG / DVD	 Setup / OPT /
 EPG / DVD	 Guide / EPG / -/--
 Red / Goto DVD	 Red / Netflix / Search
 Red / Goto DVD	 Shift + Text /
 Green / Slow DVD	 Green / APP / Repeat
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Yellow / Repeat	 Shift + Green / APP /
 Blue / A-B DVD	 Blue / Prime Video / Random
 Blue / A-B DVD	 Shift + Yellow / YouTube /
 Play	 Play / Slow
 Pause / Timeshift	 Pause / Step / Freeze
 Stop / FAV	 Fav / Marker / PC

Original	Replacement
 Stop / FAV	 Stop / Hold
 [≡i] / Audio / Index	 Audio / Lang I/II
 I<<	 I<< / Preset-
 [ /≡] / Text	 Text / Goto
 << / Cancel	 << / Tune-
 [≡x] / Cancel	 Shift + Exit / Cancel / Clear
 [≡♦] / Freeze	 Shift + Pause / Step /
 Size / DVD Title	 Zoom / Size
 Size / DVD Title	 Shift + Sound / Title
 >>	 >>  / Preset+
 [≡+] / Hold	 Shift + Stop /
 >>	 >> / Tune+
 [≡?] / Reveal	 Shift + OK
 [≡o] / Subpage / DVD Menu	 D.Menu / Top

