







 








 




Original	Replacement
	Power
	Mute / Dimmer
	Rec / Rec Mode
	D.Menu / Top
	Display / Media
	Picture / Format
	Smart / List
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Green / APP / Repeat

Original	Replacement
	0
	Info / Angle
	<< / Tune-
	Vol-
	Vol+
	I<< / Preset-
	>> / Tune+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	>>I / Preset+
	Shift + Menu /
	Up
	Back / Return
	Left
	OK
	Right





Original		Replacement		Original		Replacement	
	Menu		Menu / Home				
	Down		Down				
	Setup		Setup / OPT /				
	Time Shift		Sleep / Timer				
	Slow I>		Shift + Play /				
	A-B		Shift + YouTube /				
	Goto		Shift + Text /				
	Zoom		Zoom / Size				
	Audio		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Angle		Shift + Info / Angle				
	Red		Red / Netflix / Search				
	Green / EPG		Green / APP / Repeat				
	Green / EPG		Guide / EPG / -/--				
	Yellow / Text		Text / Goto				
	Yellow / Text		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

