 


 

 













 







 

 

















 







 



 



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Setup	 D. Menu	 Movie	 Shift + 1
 DTV	 Smart	 Music	 Shift + 2
 HDMI / AV	 AV	 Photo	 Shift + 3
 Mute	 Mute	 Vol -	 Vol -
 Edit	 Ch +	 Vol +	 Vol +
 Copy	 Ch -	 Up	 Up
 Info	 Info	 Right	 Right
 1	 1	 Down	 Down
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4	 Exit	 Exit
 5	 5	 Home	 Shift + Smart
 6	 6	 Home	 Menu
 7	 7	 Timer REC	 Back
 8	 8	 EPG	 Guide
 9	 9	 Rec	 Rec





Original	Replacement
 << REV	 <<
 >> F.F	 >>
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 I<< PG.UP	 I<<
 I<< PG.UP	 +  Shift + Up
 >>I PG.DN	 >>I
 >>I PG.DN	 +  Shift + Down
 Audio	 Dual
 Sub-T	 Subt
 S/S	 Format
 TV / Radio	 TV/R
 Disk	 Media
 Repeat	 +  Shift + Text
 TTX / DVD	 +  Shift + Media
 TTX / DVD	 Text

Original	Replacement
 FAV	 Pre Ch
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

