



 





 

 

 

 

 



 


 
 


 
































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/Radio		TV/Radio /
	0		0
	EPG		Guide / EPG / -/--
	Fav		Fav / Marker / PC
	Menu		Menu / Home
	Info		Info / Angle
	Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear
	SAT		Shift + 0
	V-Mode		Display / Media
	TV/AV		AV / Input / RDS
	Sleep		Sleep / Timer
	Up / PR+		CH+ / Page+
	Up / PR+		Up
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK / List		OK
	OK / List		Smart / List
	Right / Vol+		Vol+
	Right / Vol+		Right
	Page-		Shift + CH- /
	Down / PR-		CH- / Page-
	Down / PR-		Down





Original	Replacement	Original	Replacement
Page+	Shift + CH+ /		
Red / Find	Red / Netflix / Search		
Green / V-Format	Picture / Format		
Green / V-Format	Green / APP / Repeat		
Yellow / TXT	Text / Goto		
Yellow / TXT	Yellow / YouTube / Repeat		
Blue / Audio L/R	Audio / Lang I/II		
Blue / Audio L/R	Blue / Prime Video / Random		
Record	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		
Shift	Eject / Surround		
<< Fast	<< / Tune-		
Fast >>	>> / Tune+		
< Slow	I<< / Preset-		
Slow >	>>I / Preset+		

