

























Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[≡o]		<< / Tune-
	>>/[≡?]		>> / Tune+
	I<</[≡+]		I<< / Preset-
	>>I/[≡..]		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[≡i]		Smart / List
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Freeze		Shift + Pause / Step / Freeze
	Info		Info / Angle
	[]/Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	REP/Rec		Rec / Rec Mode
	CH-		CH- / Page-
	1		1





	Original	Replacement		Original	Replacement
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	Audio	 Audio / Lang I/II			
	0	 0			
	Recall	 Back / Return			

	Original	Replacement





Original	Replacement	Original	Replacement
Power	 Power		
Mute	 Mute / Dimmer		
Play	 Play / Slow		
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		
<</Hold	 << / Tune-		
>>/Index	 >> / Tune+		
I<<	 I<< / Preset-		
>>I	 >>I / Preset+		
Nicam/A2	 Audio / Lang I/II		
Subtitle	 Subtitle / EQ		
Subpage	 Eject / Surround		
Size	 Zoom / Size		
Sleep	 Sleep / Timer		
DTV/Radio	 TV/Radio /		
Reveal	 D.Menu / Top		

Original	Replacement	Original	Replacement
TXT/MIX	 Text / Goto		
Menu	 Menu / Home		
Up	 Up		
Info	 Info / Angle		
Left	 Left		
Enter	 OK		
Right	 Right		
Cancel	 Exit / Cancel / Clear		
Down	 Down		
Back	 Back / Return		
Vol+	 Vol+		
List	 Smart / List		
CH+	 CH+ / Page+		
Vol-	 Vol-		
Mode	 Display / Media		
CH-	 CH- / Page-		
1	 1		





Original	Replacement	Original	Replacement
2	DVD 2	2	
3	CD - STB 3	3	
4	VIDEO 4	4	
5	TAPE 5	5	
6	TUNER 6	6	
7	AUX - HDD 7	7	
8	USB 8	8	
9	BLUETOOTH 9	9	
EPG	GUIDE EPG	Guide / EPG / -/--	
0	HDMI - SAT 0	0	
FAV	PC FAV MARKER	Fav / Marker / PC	
Red	NETFLIX SEARCH	Red / Netflix / Search	
Green	APP REPEAT	Green / APP / Repeat	
Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat	
Blue	Prime Video RANDOM	Blue / Prime Video / Random	
<</Hold	SHIFT + HOLD	Shift + Stop /	
FAV-	SHIFT +	Shift + Left	

Original	Replacement	Original	Replacement
FAV+	SHIFT +	Shift + Right	
-/--	SHIFT +	Shift + Guide / EPG / -/--	





Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Replacement	Original	Replacement
5	TAPE 5		
6	TUNER 6		
7	AUX - HDD 7		
8	USB 8		
9	BLUETOOTH 9		
Epg	GUIDE EPG		
0	HDMI - SAT 0		
Fav	PC FAV MARKER		
Red	NETFLIX SEARCH		
Green	APP REPEAT		
Yellow	YouTube REPEAT A-B		
Blue	Prime Video RANDOM		
Freeze	SHIFT + STEP - FREEZE		

