




















 


 

 



 











 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV/Source	 AV / Input / RDS
 0	 0
 Exit	 Exit / Cancel / Clear
 -/--	 Shift + Guide / EPG / -/--
 CH+	 CH+ / Page+
 [i]/Info	 Info / Angle

Original	Replacement
 Vol+	 Vol+
 CH-	 CH- / Page-
 I-II	 Audio / Lang I/II
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 TV/DTV	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [≡o]	 Sleep / Timer





Original	Replacement
<b>[≡+]/[X]</b>	<b>TUNE-</b> << / Tune-
<b>[≡x]/[⋯]</b>	<b>TUNE+</b> >> / Tune+
<b>[.]/[*]</b>	<b>PRESET-</b>  << / Preset-
<b>[≡◆]/[+]/Wide</b>	<b>FORMAT</b> / <b>PICTURE</b> Picture / Format
<b>[≡?]</b>	<b>PRESET+</b> >>  / Preset+
<b>[≡i]/Guide</b>	<b>GUIDE</b> / <b>EPG</b> Guide / EPG / -/--
<b>P&lt;P/SWAP</b>	<b>PC FAV MARKER</b> Fav / Marker / PC
<b>PP</b>	<b>RETURN BACK</b> Back / Return

Original	Replacement

