




 


 




 

 






 

 











 

 




 





 



 



 

 
 





 







 




Original	Replacement	Original	Replacement
 Standby - On	 Power	 Volume-	 Vol -
 Rec	 Shift + Rec	 HDD	 Red
 1	 1	 DVD	 Green
 2	 2	 TUNER	 Yellow
 3	 3	 DV	 Blue
 4	 4	 Select	 Media
 5	 5	 TV/DVD	 Smart
 6	 6	 Source	 AV
 7	 7	 DVD Rec	 Rec
 8	 8	 I<< Prev	 I<<
 9	 9	 I<< Prev	 <<
 0	 0	 >>I Next	 >>I
 Return	 Back	 >>I Next	 >>
 T/C	 Text	 Shuffle	 TV/R
 CH+	 Ch +	 Zoom	 Eject
 CH-	 Ch -	 Stop	 Stop
 Volume+	 Vol +	 Play	 Play




 
 
 


 







 



	Original	Replacement		Original	Replacement
	Pause		Pause		
	Info		Info		
	Up		Up		
	Left		Left		
	OK		Ok		
	Right		Right		
	Down		Down		
	Timer		Shift + AV		
	Setup		Options		



 











 

 

 




 






 

 

 
 


 



 

 


 

 

 
 
Original	Replacement	
On/Off		Power
Prev		Ch -
Slow Down		Shift + Left
Next		Ch +
Audio Off		Mute
Title		List
Slow Up		Shift + Right
Subt.		Subt
Auto/Track		Shift + 3D
Rep/A-B		Shift + Text
Menu		Menu
Stop		Stop
Repeat/1/All		Text
Menu Up		Up
Pause		Pause
Zoom		Eject
DVD/TV		Smart

Original	Replacement	
Menu Left		Left
OK Enter		Ok
Return		Back
Menu Right		Right
Progr.		Sleep
Display		Shift + Info
Menu Down		Down
Volume+		Vol +
Next		>>
Top Menu		D. Menu
Volume-		Vol -
1		1
Prev.		<<
2		2
Syst.Preset		Exit
3		3
4		4





Original	Replacement	Original	Replacement
5	 5		
Digest	 +  Shift + List		
6	 6		
Auto Scan	 +  Shift + Options		
Remain	 +  Shift + Smart		
7	 7		
Timer	 +  Shift + AV		
Angle	 Format		
Pbc	 Yellow		
Random	 +  Shift + TV/R		
Shuffle	 +  Shift + D. Menu		
Key-	 +  Shift + Down		
8	 8		
9	 9		
Setup	 Options		
Mode	 +  Shift + Media		
Video	 AV		

Original	Replacement	Original	Replacement
Resume	 +  Shift + Ok		
Key+	 +  Shift + Up		
Record	 Rec		
Game	 Media		
R/L	 Red		
Np	 Green		
Audio	 +  Shift + Dual		
Play	 Play		
+10	 Guide		
Karaoke/Step	 +  Shift + Pause		
Play/Back	 +  Shift + Play		
Echo+	 +  Shift + Ch +		
Info	 Info		
Echo-	 +  Shift + Ch -		
Rewind	 <<		
0	 0		
C/CH	 Pre Ch		





Original	Replacement	Original	Replacement
Search	TV/R		
Lang	Dual		
3D	3D		
F.Forward	>>		
5.1Ch	Shift + 5		
2.1Ch	Shift + 2		
NTSC/PAL	Shift + 4		
Dimmer	Shift + 0		

