

 

 




 
 


 
 









 
 


 
 
 

 



 
 


 
 


 
 



 
 
 
 
 


 
 














Original	Replacement	Original	Replacement
 Power	 Power	 Stop / Reveal	 Stop
 Mute	 Mute	 << / Hold	 <<<
 Red	 Red	 >> / Subpage	 >>>
 Green	 Green	 I<< / Size	 I<<<
 Yellow	 Yellow	 >>I / Cancel	 >>>I
 Blue	 Blue	 Info	 Info
 EPG	 Guide	 Input	 AV
 Rec	 D. Menu	 Up	 Up
 Rec. List	 Eject	 Left	 Left
 T-Shift	 3D	 OK	 Ok
 Sub-T	 Subt	 Right	 Right
 Audio	 Dual	 Down	 Down
 Sleep	 Sleep	 Menu	 Menu
 TV/Radio	 TV/R	 Exit	 Exit
 Text	 Text	 Vol+	 Vol +
 Play / Index	 Play	 Vol-	 Vol -
 Pause / Mix	 Pause	 P-Mode	 Format





Original	Replacement
S-Mode	List
CH+	Ch +
CH-	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	+  Shift + Guide
0	0
Recall	Back
Fav	Pre Ch
Fav+	Smart

Original	Replacement
Fav-	Media

