


 

 
 

 
 
 
 


 
 
 

 


 
 


 




 



 



 



 



 



 
 


 




 
 
 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 TV	 TV/R
 Info	 Info	 1	 1
 Audio	 Dual	 2	 2
 Mix	 Shift + Text	 3	 3
 Mute	 Mute	 4	 4
 Menu / Exit	 Menu	 5	 5
 Menu / Exit	 Exit	 6	 6
 Up / CH+	 Up	 7	 7
 Up / CH+	 Ch +	 8	 8
 Down / CH-	 Down	 9	 9
 Down / CH-	 Ch -	 0 / Recall	 0
 Left / Vol-	 Left	 Time	 AV
 Left / Vol-	 Vol -	 Play	 Play
 Right / Vol+	 Right	 Red / DPA/List	 Red
 Right / Vol+	 Vol +	 Red / DPA/List	 List
 OK	 Ok	 Green / Store	 Green
 Text	 Text	 Yellow / Delete	 Yellow





Original		Replacement		Original		Replacement	
	Blue / Radio		Blue				
	Blue / Radio		+				

