 






 




























 



 



 



 



 

 

 

 

 

 

 

 













 



 

 



 



 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Back / Return
 TV/R	 TV/Radio /	 Sat	 Shift + 0
 Mute	 Mute / Dimmer	 Red/Audio	 Red / Netflix / Search
 Display	 Display / Media	 Green/Pause	 Green / APP / Repeat
 Mode	 Smart / List	 Yellow/Zoom	 Yellow / YouTube / Repeat
 Time	 Shift + Sleep / Timer	 Blue/Info	 Blue / Prime Video / Random
 F1	 Setup / OPT /	 Menu	 Menu / Home
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Subtitle	 Subtitle / EQ
 3	 3	 Epg	 Guide / EPG / -/-
 4	 4	 Fav	 Fav / Marker / PC
 5	 5	 Txt	 Text / Goto
 6	 6	 Up/Ch+	 Up
 7	 7	 Down/Ch-	 Down
 8	 8	 Left/Vol-	 Left
 9	 9	 Right/Vol+	 Right
 0	 0	 Ok	 OK





	Original		Replacement		Original		Replacement
		Vol+		Vol+			
		Vol-		Vol-			
		Find		Shift + Red / Netflix /			
		Page Up		CH+ / Page+			
		Page Down		CH- / Page-			
		Sleep		Sleep / Timer			
				Shift + Subtitle / EQ			
		Usb		Shift + 8			
		Rew		<< / Tune-			
		Fwd		>> / Tune+			
		Play		Play / Slow			
		Stop		Stop / Hold			
		Skip Prev.		I<< / Preset-			
		Skip Next		>>I / Preset+			
		Pause		Pause / Step / Freeze			
		Rec		Rec / Rec Mode			

