












 
| Original | Replacement |
|--|---|
|  Standby |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |
|  <<< |  <<< / Tune- |
|  >>> |  >>> / Tune+ |
|  I<<< |  I<<< / Preset- |
|  >>I |  >>I / Preset+ |
|  S.Mode |  Sound / Title |
|  Audio/Tv/Radio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Eject/Auto |  Eject / Surround |
|  P.Mode |  Picture / Format |
|  Zoom/Hold |  Zoom / Size |
|  Sleep |  Sleep / Timer |

| Original | Replacement |
|--|---|
|  D.Menu/Index |  D.Menu / Top |
|  Goto/Subpage |  Text / Goto |
|  Source |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Angle/Text |  Info / Angle |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |
|  Recall |  Back / Return |
|  Vol+ |  Vol+ |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Display |  Display / Media |
|  CH- |  CH- / Page- |





| Original | Replacement | Original | Replacement |
|---|------------------------|---|-----------------------------|
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | EPG |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | FAV |  | Fav / Marker / PC |
|  | Red / Del / Prog |  | Red / Netflix / Search |
|  | Green / Rename |  | Green / APP / Repeat |
|  | Yellow / Move / Repeat |  | Yellow / YouTube / Repeat |
|  | Blue / Skip / A-B |  | Blue / Prime Video / Random |
|  | I>/Lang |  | Shift + >>1 / Preset+ |

| Original | Replacement | Original | Replacement |
|---|----------------|---|----------------------------|
|  | Nicam |  | Shift + Sound / Title |
|  | Audio/Tv/Radio |  | Shift + Audio / Lang I/II |
|  | Aspect |  | Shift + Picture / Format |
|  | Title/Size |  | Shift + Zoom / |
|  | D.Disp/Reveal |  | Shift + D.Menu / Top Menu |
|  | I>/Lang |  | Shift + Right |
|  | DVD Setup |  | Shift + 2 |
|  | FAV+ |  | Shift + 9 |
|  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | FAV- |  | Shift + Fav / Marker / PC |

