













 






 











 



 











Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Exit	 Exit / Cancel / Clear
 Nicam	 Shift + Audio / Lang I/II	 Down	 Down
 4	 4	 Display	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 Sound	 Sound / Title
 Recall/Goto	 Back / Return	 CH+	 CH+ / Page+
 Recall/Goto	 Shift + Text /	 Vol-	 Vol-
 7	 7	 Pic	 Picture / Format
 8	 8	 CH-	 CH- / Page-
 9	 9	 Sleep	 Sleep / Timer
 0	 0	 Aspect	 Shift + Picture / Format
 TV Menu	 Menu / Home	 DVD/DVB Setup	 Setup / OPT /
 Up	 Up	 DVD Source	 Shift + AV / Input / RDS

Original	Replacement	Original	Replacement
 DIMMER MUTE	 SHIFT	 TV	 DVD
 MUTE	 AUX	 SLOW	 STEP-FREEZE
 1	 HOLD	 TUNE-	 TUNE+
 2	 REC MODE	 PRESET-	 PRESET+
 3	 EQ	 TITLE	 LANG I/II
 NICAM	 SURROUND	 SOUND	 AUDIO
 4	 SUBTITLE	 FORMAT	 SIZE
 5	 TIMER	 PICTURE	 ZOOM
 6	 PROGRAM	 TOP MENU	 OPT-TOOLS
 Recall/Goto	 TV RADIO	 D.MENU	 SETUP
 Recall/Goto	 RDS AV INPUT	 HOME	 ANGLE
 7	 INFO	 MENU	 OK
 8	 RETURN	 CLEAR	 EXIT
 9	 BACK	 CANCEL	 LIST
 0	 SMART	 VOL+	 CH PAGE
 Recall/Goto	 MEDIA	 VOL-	 DISPLAY
 Recall/Goto	 TV	 TV	 DVD
 7	 DVD	 1	 2
 8	 CD-ITB	 4	 5
 9	 TAPE	 VIDEO	 TUNER
 0	 TUNER	 AUX-HDD	 USB
 Recall/Goto	 BLUETOOTH	 GUIDE EPG	 HDMI-BAT
 Recall/Goto	 FC	 REC	 FAV MARKER
 Recall/Goto	 NETFLIX	REC LIST	 APP
Recall/Goto	 YouTube	PVR INFO	 Prime Video
Recall/Goto	 SEARCH	PIP	 REPEAT
Recall/Goto	 REPEAT A-B	 Mandis SHOP	 RANDOM
Recall/Goto	 www.mandis.tv	 Mandis SHOP	 Mandis SHOP



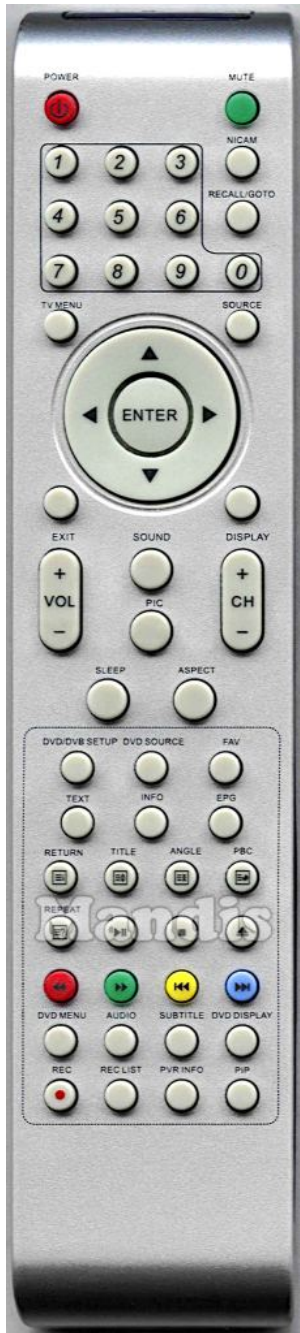

Original	Replacement
	Fav  Fav / Marker / PC
	Text  Text / Goto
	Info  Info / Angle
	EPG  Guide / EPG / -/--
	Return / Index  Shift + Back / Return
	Title / Size  Shift + Sound / Title
	Title / Size  Zoom / Size
	Angle / Hold  Shift + Stop /
	PBC / Subcode  TV/Radio /
	Repeat / Reveal  Shift + Green / APP /
	Play/Pause  Play / Slow
	Stop  Stop / Hold
	Open/Close  Eject / Surround
	Red / <<  << / Tune-
	Red / <<<  Red / Netflix / Search
	Green / >>>  >> / Tune+
	Green / >>>  Green / APP / Repeat

Original	Replacement
	Yellow / I<<<  I<<< / Preset-
	Yellow / I<<<  Yellow / YouTube / Repeat
	Blue / >>>I  >>>I / Preset+
	Blue / >>>I  Blue / Prime Video / Random
	DVD Menu  D.Menu / Top
	Audio  Audio / Lang I/II
	Subtitle  Subtitle / EQ
	DVD Display  Shift + Display / Media
	Rec  Rec / Rec Mode
	Rec List  Smart / List
	PVR Info  Shift + Info / Angle
	PIP  Shift + Smart / List

