













 
 
 

 
 











Original		Replacement		Original		Replacement	
	Power		Power		9		9
	EPG		Guide / EPG / -/--		Zoom		Zoom / Size
	Teletext		Text / Goto		0		0
	Select		Smart / List		Goto		Shift + Text /
	Confirm		D.Menu / Top		i/Display		Display / Media
	Title		Sound / Title		Guide		Shift + Guide / EPG / -/--
	Eject		Eject / Surround		Up		Up
	Menu		Menu / Home		Left		Left
	Option		Shift + Setup / OPT / Tools		OK		OK
	1		1		Right		Right
	2		2		Rec		Rec / Rec Mode
	3		3		Down		Down
	4		4		Return		Back / Return
	5		5		Vol-		Vol-
	6		6		Vol+		Vol+
	7		7		<<		<< / Tune-
	8		8		Stop		Stop / Hold





Original		Replacement	
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	I>/Slow		Info / Angle
	Pasue/Step		Pause / Step / Freeze
	>>I		>>I / Preset+
	Source		AV / Input / RDS
	Time Shift		Picture / Format
	Repeat		Shift + Green / APP / REPEAT
	aA/Subtitle		Subtitle / EQ
	Setup		Setup / OPT /
	Red		Red / Netflix / Search
	Tv System		TV/Radio /
	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	Mute		Mute / Dimmer

Original		Replacement	
	Blue		Blue / Prime Video / Random

