 

 
 

 



 

 
 
 


 
 
 





 







 


 
 


 
 
 

 
 
 
 
 
 

 
 

 
 
 
 






	Original	Replacement		Original	Replacement
	Power		Power		Search
	Open / Close		Eject		TV/R
	1		1		Options
	2		2		List
	3		3		Up
	4		4		Right
	5		5		Down
	6		6		Left
	7		7		Enter
	8		8		PBC
	9		9		Smart
	0		0		Menu
	10 +		Guide		Audio
	Display		Info		Zoom
	Subtitle		Subt		USB / Card
	Vol +		Vol +		Step II >
	Vol -		Vol -		Stop
					Play / Pause
					Play / Pause
					Shift + Eject
					Media
					Shift + Pause
					Stop
					Play
					Pause





Original		Replacement		Original	Replacement
	I<< Prev		I<<		
	Next >>I		>>I		
	<< Rev		<<		
	Fwd >>		>>		
	L / R	 + 	Shift + Dual		
	N / P		3D		
	Angle		Format		
	Mute		Mute		
	Program		Sleep		
	Clear		Exit		
	Repeat		Text		
	A - B	 + 	Shift + Text		
	V - Mode		Green		
	TV - Mode		Yellow		
	Slow	 + 	Shift + Play		
	Return		Back		

