



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Play	 Play / Slow	 i	 Info / Angle
 Pause	 Pause / Step / Freeze	 Left	 Left
 Stop	 Stop / Hold	 OK	 OK
 Rec	 Rec / Rec Mode	 Right	 Right
 <<	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>	 >> / Tune+	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 Source (Games)	 Eject / Surround	 Vol+	 Vol+
 Movie-Music-Phot	 Picture / Format	 World (Violet)	 Smart / List
 [≡]..	 Zoom / Size	 PR+	 CH+ / Page+
 */O	 Sleep / Timer	 Vol-	 Vol-
 TV	 TV/Radio /	 */Q	 Display / Media
 Q.Menu	 D.Menu / Top	 PR-	 CH- / Page-
 [-O-]	 Setup / OPT /	 1	 1
 [≡]/Text	 Text / Goto	 2	 2





Original		Replacement	
3 def	3	CO - STB 3	3
4 ghi	4	VIDEO 4	4
5 jkl	5	TAPE 5	5
6 mno	6	TUNER 6	6
7 pqrs	7	AUX - HDD 7	7
8 tuv	8	USB 8	8
9 wxyz	9	BLUETOOTH 9	9
Guide	Guide	Guide / EPG / -/--	Guide / EPG / -/--
0	0	HDMI - BAT 0	0
	Red	Red / Netflix / Search	Red / Netflix / Search
	Green	Green / APP / Repeat	Green / APP / Repeat
	Yellow	Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
	Blue	Blue / Prime Video / Random	Blue / Prime Video / Random
	Recall	Shift + Back / Return	Shift + Back / Return

Original		Replacement	

