


 

 

 

 



 

 

 







 












Original	Replacement
	 Power
	 Text
	 Sleep
	 Options
	 Info
	 Smart
	 Format
	 Dual
	 Exit
	 Up
	 Ch +
	 Ch -
	 Down
	 Right
	 Vol +
	 Left
	 Vol -

Original	Replacement
	 Menu
	 Ok
	 Media
	 AV
	 Pre Ch
	 Red
	 Shift + Format
	 Green
	 Shift + Dual
	 Yellow
	 Shift + AV
	 Blue
	 List
	 1
	 2
	 3
	 4



