 



 

 


 

 

 

 

 










 





Original	Replacement
 P100	 Guide / EPG / -/--
 Power	 Power
 REV	 Sleep / Timer
 DOUB	 Smart / List
 1	 1
 2	 2
 3	 3
 Hold	 Stop / Hold
 4	 4
 5	 5
 6	 6
 SUB	 Subtitle / EQ
 Update	 Display / Media
 7	 7
 8	 8
 9	 9
 MIX	 D.Menu / Top

Original	Replacement
 AV	 AV / Input / RDS
 0	 0
 TV	 TV/Radio /
 P+	 Up
 P+	 CH+ / Page+
 Mute	 Mute / Dimmer
 TV/TXT	 Text / Goto
 Menu	 Menu / Home
 Vol-	 Vol-
 Vol-	 Left
 OK	 OK
 Vol+	 Vol+
 Vol+	 Right
 SWAP	 Back / Return
 P-	 CH- / Page-
 P-	 Down
 16:9	 Picture / Format



Menu



	Original	Replacement		Original	Replacement
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Violet/Info	 Info / Angle			
	[]	 Zoom / Size			
	PC	 Fav / Marker / PC			
	PT	 Setup / OPT /			

