





 




 












































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 PPV	 TV/Radio /
 Opciones	 Setup / OPT /
 Video Club	 Subtitle / EQ
 Menu	 Menu / Home
 Guia	 Guide / EPG / -/-
 Idiomas	 Audio / Lang I/II
 Herramientas	 Smart / List
 Tv/Salir	 Exit / Cancel / Clear
 ?/Ayuda	 Fav / Marker / PC
 Atras	 Back / Return
 B.	 Display / Media
 Info	 Info / Angle
 Vol+	 Vol+
 Up	 Up
 PRG+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
	 << / Tune-
	 Left
 OK	 OK
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
	 Right
	 >> / Tune+
	 CH- / Page-
	 Down
	 Stop / Hold
	 Red / Netflix / Search
	 Zoom / Size
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
 1	 1





	Original	Replacement	Original	Replacement
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		

