



Original	Replacement	Original	Replacement
	Power		Power
	Freeze		Freeze / Timer
	[↑↓]		Mode
	[/]		Auto
	Mute		Blank / Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Enter
	Keystone +		Shift + Up
	Keystone -		Shift + Down
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
	[≡]		Menu
	3D		3D / Invert
	HDMI		+ / Play
	VGA		- / Stop
	Video		Comp / Video
	Source		Source
	Bright*/*		Volt / Focus
	Recall		Eco / Aspect

