 


 

 
 




 
 



 

 

 





 
 


 
 


 









 

 


 



 

 

 





 


 
 




 

 
 

 

 









 

 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Program	 Sleep
 Eject	 Exit	 Timer Rec	 Shift + Rec
 Open / Close	 Eject	 Rec / OTR	 Rec
 Display / Call	 Info	 Marker / Tape	 Vol +
 Channel +	 Ch +	 Jump / Zero	 Shift + Back
 Channel -	 Ch -	 Clock / Counter	 Guide
 1	 1	 Counter Reset	 Pre Ch
 2	 2	 TV / VCR	 TV/R
 3	 3	 VCR	 Smart
 4	 4	 DVD	 Media
 5	 5	 Setup / Menu	 Menu
 6	 6	 DVD Menu	 D. Menu
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right / TRK +	 Right
 0 / AV	 0	 Left / TRK -	 Left
 0 / AV	 AV	 Enter / Select	 Ok





Original	Replacement	Original	Replacement
 Title	 List		
 Return	 Back		
 Stop	 Stop		
 Play	 Play		
 Pause / Still	 Pause		
 I<< / Index/Skip -	 I<<		
 << / Search -	 <<		
 >> / Search +	 >>		
 >>I / Skip/Index	 >>I		
 Cancel	 +  Shift + Exit		
 Repeat A-B	 Text		
 Zoom	 +  Shift + Eject		
 Slow	 Vol -		
 Angle	 3D		
 Play Mode	 +  Shift + Play		
 Sub Title	 Subt		
 Audio	 Dual		

