



Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 Setup	 Setup / OPT /	 Menu	 Menu / Home
 Tv Out	 TV/Radio /	 Up	 Up
 Func	 D.Menu / Top	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Play List	 Smart / List
 4	 4	 Bookmark	 Green / APP / Repeat
 5	 5	 Stop	 Stop / Hold
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Vol+	 Vol+
 9	 9	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 Goto	 Text / Goto	 Vol-	 Vol-
 Title	 Sound / Title	 I<<	 I<< / Preset-





Original		Replacement		Original		Replacement	
	>>		>> / Preset+				
	Media		Display / Media				
	Rotation		Picture / Format				
	F1		Shift + 1				
	Random		Blue / Prime Video / Random				
	Audio		Audio / Lang I/II				
	Sub-T		Subtitle / EQ				
	Zoom		Zoom / Size				
	Repeat		Exit / Cancel / Clear				
	A-B		Yellow / YouTube / Repeat				
	Return		Back / Return				
	Pg Up		CH+ / Page+				
	Pg Dn		CH- / Page-				

