



Original	Replacement
Power	Power
Power Tv	+  Shift + Power
AV Input Tv	AV / Input / RDS
Vol+ Tv	Vol+
Vol- Tv	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Cancel	+  Shift + Exit / Cancel / Clear
Audio	Audio / Lang I/II

Original	Replacement
Open/Close	Eject / Surround
Status	TV/Radio /
PIP	Zoom / Size
Internet	Smart / List
<< Search	<< / Tune-
Play	Play / Slow
Search >>	>> / Tune+
I<< Skip	I<< / Preset-
Pause	Pause / Step / Freeze
Skip >>I	>>I / Preset+
Stop	Stop / Hold
Pop Up Menu	Menu / Home
EXit	Exit / Cancel / Clear
Option	Setup / OPT /
Return	Back / Return
Top Menu	D.Menu / Top
Netflix	Shift + Red / Netflix / Search





	Original	Replacement		Original	Replacement
	Home	Shift + Menu /			
	Up	Up			
	Down	Down			
	Left	Left			
	Right/I>	Right			
	OK	OK			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			

