
 

 
 





 







 

 


 


 



 









Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Sleep	 Sleep / Timer	 0	 0
 O/Play	 Subtitle / EQ	 Del	 Exit / Cancel / Clear
 Play	 Play / Slow	 +10	 Guide / EPG / -/-
 Clock/Timer	 Shift + Sleep / Timer	 iPod	 Red / Netflix / Search
 Program	 TV/Radio /	 CD	 Shift + 3
 Vol+	 Vol+	 Radio/Ext In	 Green / APP / Repeat
 Vol-	 Vol-	 I<<	 I<< / Preset-
 Mute	 Mute / Dimmer	 Pause	 Pause / Step / Freeze
 1	 1	 >>I	 >>I / Preset+
 2	 2	 <<	 << / Tune-
 3	 3	 Stop	 Stop / Hold
 4	 4	 >>	 >> / Tune+
 5	 5	 Sound	 Sound / Title
 6	 6	 D.Bass	 D.Menu / Top
 7	 7	 Preset EQ	 Setup / OPT /
 8	 8	 Display/Dimmer	 Info / Angle





Original	Replacement
Auto Off	Zoom / Size
iPod Menu	Display / Media
Play Menu	Menu / Home
Radio Menu	Smart / List
Up	Up
Down	Down
Left	Left
Right	Right
OK	OK
Input Level	AV / Input / RDS
Eject iPod	Shift + Right
Eject CD	Shift + Left
Auto Preset	Picture / Format

Original	Replacement

