



Original	Replacement	Original	Replacement
	Power		Blue/[]
	Vol +		Info
	Vol -		Text
	Ch +		1
	Ch -		2
	Mute		3
	Menu		4
	Exit		5
	Back		6
	Ok		7
	Up		8
	Down		9
	Right		0
	Left		AV
	Red		Media
	Green		Play
	Yellow		>>





Original		Replacement	
	<<		<<
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Mark		3D
	0000		Guide

Original		Replacement	


 
 

 
 




Original	Replacement	Original	Replacement
Power	Power	Blue/[]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	Play	Play
PR+	Ch +	Stop	Stop
PR-	Ch -	Rec	Rec
Exit	Exit	Pause	Pause
Menu	Menu	>>	>>
Back	Back	<<	<<
Up	Up	1	1
Down	Down	2	2
Right/Zoom+	Right	3	3
Left/Zoom-	Left	4	4
OK	Ok	5	5
Red/[o]	Red	6	6
Green/Timer/List	Green	7	7
Yellow	Yellow	8	8





Original	Replacement	Original	Replacement
 9	 9		
 AV	 AV		
 SP/LP	 Media		

Original	Replacement


 
 
 


 


 
 
 




Original	Replacement	Original	Replacement
	Power		Blue/[]
	Vol +		Info
	Vol -		Text
	Mute		1
	Ch +		2
	Ch -		3
	Menu		4
	Exit		5
	Back		6
	Up		7
	Down		8
	Right		9
	Left		0
	Ok		AV
	Red		Media
	Green		Play
	Yellow		Stop





Original	Replacement	Original	Replacement
 >>	 >>		
 <<	 <<		
 Rec	 REC MODE Rec		
 Pause	 Pause		
 Mark	 ECO 3D 3D		
 0000	 -/-- GUIDE Guide		

