




 

 

 

 

 



 









 

 





Original	Replacement
 Power	 Power
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Green/[ ]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Play/[≡]	 Play / Slow
 Blue/[■]	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡]	 Audio / Lang I/II
 [->]/[+]	 Picture / Format
 [-S-]	 Zoom / Size
 Menu	 Menu / Home
 [≡]	 Text / Goto
 Pause	 Pause / Step / Freeze


 

Original	Replacement
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5









Original	Replacement	Original	Replacement
O	 Eject / Surround		[≡]
-O-	 Subtitle / EQ		Left
Power	 Power		Up
Rec	 Rec / Rec Mode		Right
I<<	 I<< / Preset-		OK
Red	 Red / Netflix / Search		Down
Green/[ [ ] ]	 Green / APP / Repeat		Vol+
Stop	 Stop / Hold		Mute
Play	 Play / Slow		P+
Yellow / List	 Yellow / YouTube / Repeat		Vol-
>>I	 >>I / Preset+		Smart J
AV/[?]	 AV / Input / RDS		P-
I-II/[≡≡]	 Audio / Lang I/II		Smart [ ]
[<>]/[+]	 Zoom / Size		1
PIP [■]	 Picture / Format		2
Menu	 Menu / Home		3
Pause	 Pause / Step / Freeze		4

Original	Replacement	Original	Replacement
	Text / Goto		[≡]
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute / Dimmer		Mute
	CH+ / Page+		P+
	Vol-		Vol-
	Sound / Title		Smart J
	CH- / Page-		P-
	Smart / List		Smart [ ]
	1		1
	2		2
	3		3
	4		4





Original		Replacement	
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

 



 







 
 
Original		Replacement	







Original	Replacement
 Power	 Power
 -O-	 Subtitle / EQ
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡ ≡]	 Audio / Lang I/II
 [<>]/[+]	 Zoom / Size
 Pause	 Pause / Step / Freeze
 [≡]	 Text / Goto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Fav / Marker / PC

