







 

 















Original		Replacement		Original		Replacement	
	Power		Power				
	Input		AV / Input / RDS				
	Mobile		Display / Media				
	Internet Radio		TV/Radio /				
	Songbird		Setup / OPT /				
	Right		Right				
	Left		Left				
	Clock		Sleep / Timer				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Vol+		Vol+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				

