 

 

 

 

 

 

 

 

 



 

 



 

 

 

 





Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 AUX / MP3 Link	 Shift + 7
 Radio	 Shift + 6
 Radio	 TV/Radio /
 USB	 Shift + 8
 DOCK	 Shift + 2
 Disc	 Shift + 3
 Info	 Info / Angle
 Up	 Up
 Left/ <<<	 <<< / Tune-
 Left/ <<<	 Left
 OK	 OK
 Right/ >>>	 >>> / Tune+
 Right/ >>>	 Right
 Menu/Back	 Back / Return
 Menu/Back	 Menu / Home

Original	Replacement
 Down	 Down
 Options	 Setup / OPT /
 I<	 I<< / Preset-
 Play/pause	 Play / Slow
 I>	 I>> / Preset+
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 Vol+	 Vol+
 Surround	 Shift + Eject / Surround
 Sound Modes+	 CH+ / Page+
 Vol-	 Vol-
 Sound Modes-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement		Original	Replacement
	6	TUNER 6			
	7	AUX - HDD 7			
	8	USB 8			
	9	BLUETOOTH 9			
	SUBTITLE	EQ SUBTITLE			
	0	HDMI - BAT 0			
	AUDIO SYNC	LANG I/II AUDIO			
	REPEAT PROGRAM	APP REPEAT			
	REPEAT PROGRAM	SHIFT + PROGRAM TV/RADIO			
	REPEAT A-B	YouTube REPEAT A-B			
	ZOOM	SIZE ZOOM			
	SLEEP	TIMER SLEEP			

	Original	Replacement		Original	Replacement

