



 

 









































Original	Replacement
 Standby/On	 Power
 Smart Picture	 Picture / Format
 Eject	 Eject / Surround
 Child Lock	 Zoom / Size
 Monitor	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Turbo Timer	 Smart / List
 0	 0
 Timer	 Sleep / Timer

Original	Replacement
 Menu	 Menu / Home
 Up / P+	 CH+ / Page+
 Up / P+	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Down / P-	 Down
 Down / P-	 CH- / Page-
 TV+	 Shift + CH+ /
 Clear	 Exit / Cancel / Clear
 Select	 Fav / Marker / PC
 Vol-	 Vol-
 TV Power	 Shift + Power
 TV-	 Shift + CH- /
 Play	 Play / Slow
 <<	 << / Tune-





Original	Replacement	Original	Replacement
 Stop	 Stop / Hold		
 >>	 >> / Tune+		
 >I / Index	 Info / Angle		
 Record/OTR	 Rec / Rec Mode		
 >I< / Still	 Pause / Step / Freeze		

Original	Replacement

